



ONEFLOR Installation Instructions ECOCLICK 30 / 55

The **ONEFLOR CLICK LVT** without sound insulation is a high-quality, resilient design flooring in various formats and designs. For more information, please refer to the technical specifications in our product collections. Below we would like to inform you about the special requirements for a successful installation of **CLICK LVT without integrated sound reduction**.

IMPORTANT GENERAL INFORMATION:

Before processing, make sure that the delivered goods are in perfect condition. Goods that have been cut to size or laid are not subject to complaint. Before installation, the goods must be checked for color and batch uniformity. Only install planks/tiles of the same batch in one room. The relevant national standards, guidelines and regulations, together with the technical documents and generally acknowledged rules of the trade, apply when installing the CLICK LVT without integrated sound reduction. Slight differences in colour, gloss level and structure are production-related and are not a reason for complaint. Mix material when laying from 3 packages.

SUBSTRATE CONDITION:

The substrate must be leveled, load-bearing and permanently dry maximum RH 75%. The maximum height tolerance must not exceed 2-3mm per linear meter or 1mm per 10cm for tile edges. Textile floor coverings and needle fleece must be removed.

SUBSTRATES:

ONEFLOR CLICK LVT without integrated sound reduction can be installed floating on all types of screeds, on existing vibration-free wood, plank and chipboard floors, on stone, ceramic and marble floors. Textile floor coverings and needlefelt must be removed. Generally, the removal of old floor coverings is recommended to counteract adverse reactions (possibly occurring mold formation, insufficient compressive strength)

Substrates not listed require the approval of ONEFLOR-EUROPE.COM.


Notice: The flooring installer must check the subfloor's readiness for installation before installing the flooring and raise any concerns. Especially in case of:

- larger unevenness
 - insufficiently dry subfloor.
 - insufficiently firm, too porous and too rough surface of the subfloor,
 - contaminated surface of the substrate, e.g. by oil, wax, varnish, paint residues,
 - incorrect height of the surface of the substrate in relation to the height of adjacent components,
 - unsuitable temperature of the substrate,
 - unsuitable room climate,
 - missing heating protocol in case of heated floor constructions,
 - missing protrusion of the edge insulation strip,
 - missing marking of measuring points in case of heated floor constructions,
- missing joint plan.

When installing ONEFLOR CLICK LVT without integrated sound reduction on underfloor heating systems, EN 1264-2 (warm water underfloor heating systems and components) must be taken into account. The surface temperature should not exceed 27°C on a permanent basis. If other underfloor heating systems are used, please consult the application engineering department of ONEFLOR-EUROPE.COM. To prevent rot damage to wood-based subfloor constructions (e.g. wooden beam ceilings), ensure or guarantee sufficient rear ventilation of the construction.

TOOLS FOR LAYING:

- Laying knife with trapezoidal blade /jigsaw
- Folding rule / tape measure
- White rubber mallet
- Spacer
- Pencil / scribe
- Set square / spirit level 2m

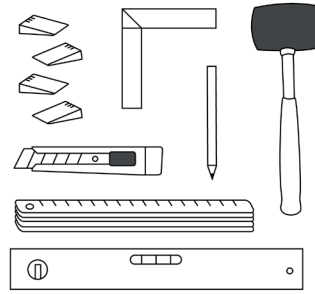

SQUARE ACCLIMATIZATION:

ONEFLOR CLICK LVT without integrated sound reduction as well as all required auxiliary materials must be acclimatized at least 48 hours before installation in small stacks (max.3) in the rooms to be installed or adjacent rooms under the following conditions!

Room climatic conditions before, during and after laying:

- Room air temperature > 18°C (but not more than 26°C).
- Floor temperature > 15°C (but not more than 22°C)
- Relative humidity < 65%

INSTALLATION:

LVT Floor without integrated sound reduction may only be installed with underlay material, suitable for vinyl floors with high compressive strength. (compressive strength > DL 400 kPa).

Due to the generally too low compressive strength, the use of a non recommended underlay mat, under our ECOCLICK products leads to the exclusion of the warranty.

The use of PE foils and unsuitable underlays can lead to the exclusion of the warranty in the event of damage.

We recommend the use of ONEFLOR CLICK LVT without integrated sound reduction when laying on:

- Parquet, precast wood screeds and other wood-based materials
- even stone floors, ceramic tiles, marble, porcelain stoneware
(Joint requirement: <5mm wide, <2mm deep, height offset from tile to tile <1mm).
- Old and new screed

Substrates not listed require approval by ONEFLOR.

Basically, the removal of old floor coverings is recommended to counteract interactions and irritations. The use of unsuitable underlays may lead to exclusion of warranty in case of damage.

The installation of ONEFLOR CLICK LVT without integrated sound reduction

MOVEMENT JOINT / EDGE DISTANCES:


Movement joint: at least 5mm wide.

Tile joints must always be filled.

TIP

Use leftover pieces of the floor covering as spacers. Also observe a distance of 5mm to all fixed objects in the room, such as pipe ducts, door frames, etc.! This movement joint must not be filled with silicon sealant, electric cables or similar!

LAYING

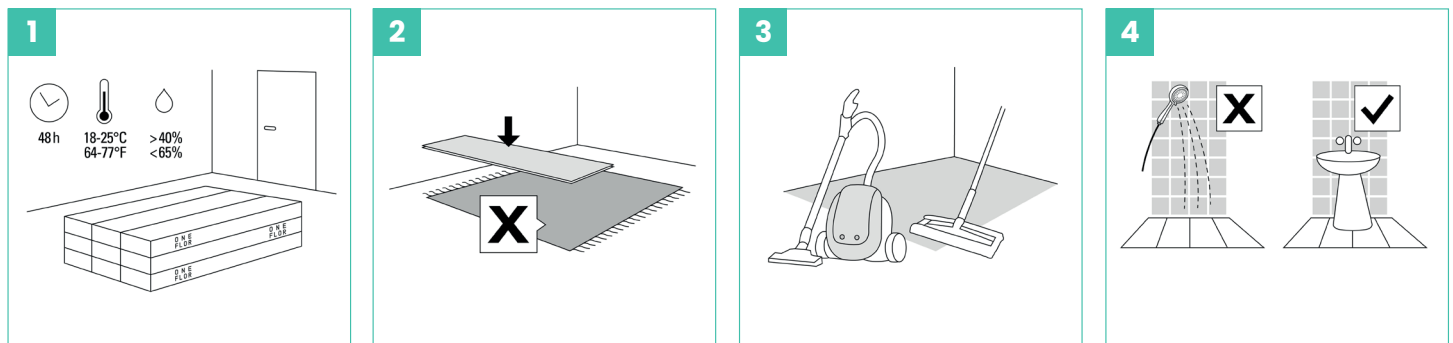

5

AE = 0,5% CM CT = 2,0% CM
AE = Anhydrite / CT = Cement

6

AE = 0,3% CM CT = 1,8% CM
AE = Anhydrite / CT = Cement

7

◀ max. 2-3 mm per meter ▶

8

9

◀ max. 1 mm per 10 cm ▶

10

◀ max. 12,5 m ▶
max. 150 m²

11

X
SOUND FOIL

12

X

13

X
PE-FOIL

14

1	3
2	4
11	12
21	22

15

5 mm

16

5 mm
30 cm
5 mm

17

2

18

3

19

3

20

3

21

3

22

3

23

3

24

3

25



3

26

X
REMOVE

27

3

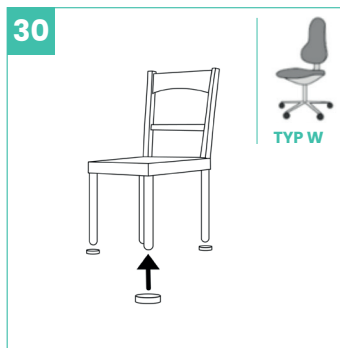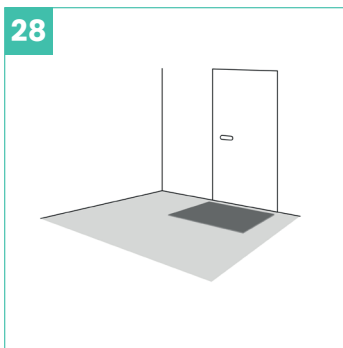

This technique is used to lay all the remaining rows.

To lay the last row, measure the distance between the wall and the laid row and transfer it to the panel. The last laying row should correspond to half a panel width if possible. Remember about the 5mm wide movement joint.

MOVEMENT PROFILES IN THE AREA:

Rooms with an uninterrupted area up to 150m² can be laid without joints, taking into account double the edge distance (approx. 10mm). A side length of approx. 12,50 m should not be exceeded. Suitable movement profiles should be used for very narrow, long rooms. Room areas that are interrupted by rising building components (pillars, partition walls, doorways, etc.) should be separated by placing movement joints (at least 10mm, depending on the size of the area) at the height of the building components.

When installing skirting boards, transition or end profiles, it must be taken into account that the skirting boards or profiles must never be fastened to the floor covering! Skirting boards with circumferential silicone joints, which fix the floor, lead to the exclusion of the guarantee

Building expansion joints must be taken over.

IMPORTANT NOTES ON THE COMPLETION OF THE INSTALLATION

- Remove all spacers
- The ONEFLOR CLICK LVT without integrated sound reduction must not be fixed on site at any time.

Neither must the flooring be fixed to the subfloor or to furniture Kitchenettes, stoves or other fixed installation parts.

SPECIAL FEATURES AND EXCEPTIONAL SITUATIONS

- In conservatories or similar rooms with large-scale overhead glazing, Floor-to-ceiling windows to the south the use of ONEFLOR CLICK LVT without integrated sound reduction should be regarded as critical due to extreme fluctuations in the room climate and requires separate coordination and approval by ONEFLOR-EUROPE.COM.
- When using permanently elastic sealants, we recommend first applying a joint sealing foam cord to the joint areas and then filling them with acrylic compound to create a two-sided bond. Permanently elastic sealed joints are to be regarded as maintenance joints and must be regularly checked for functional capability and renewed if necessary.
- In order to prevent material changes/damage, sufficient shading must be provided and an edge distance of 10mm must be maintained when laying in areas with strong sunlight.
- Our ONFLOR design flooring meets the highest quality requirements in many respects. This also applies to the light fastness according to EN 105- B02. However, a standard test can never simulate the intensity of natural UV light, so partial color changes or fading may occur in areas with intense UV light incidence and without sufficient shading.
- A sufficiently dimensioned «radiation barrier» (e.g. glass or metal base plates) must be provided at fireplaces and tiled stoves. The size varies depending on the heating capacity of the fireplace or tiled stove. Please observe the specifications of your stove builder / chimney sweep here.
- The ONEFLOR CLICK VINYL with integrated impact sound must be decoupled from all permanently installed furniture or furnishings, e.g. kitchen units, ovens, etc.
- In the case of furnishings with high static pressure loads, sufficient load distribution (e.g. load distribution plates) must be provided according to the weight.

Please use only suitable chair castors type W

CLEANING AND CARE:

Please refer to our detailed cleaning and cleaning agent recommendations at www.oneflor-europe.com
With the publication of these installation instructions (as of 09/2021), all previous versions lose their validity